




nora[®] MAINTENANCE GUIDE

Sanitary Base & Wall Base Maintenance

nora[®]
by Interface[®]

MAINTENANCE GUIDE: SANITARY BASE & WALL BASE MAINTENANCE

Surface Textures

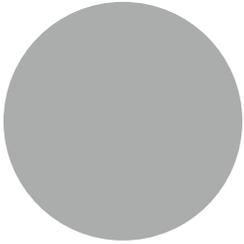

Smooth Surface

General Remarks

nora[®] sanitary base has a production residue, which must be removed (see Post-Installation Maintenance) or it will attract dust and dirt.

nora[®] wall base does not require post-installation maintenance.

nora sanitary and wall bases do not require an artificial coating.

General Precautions

1. Always use “wet floor” signs and/or caution tape when performing any wet cleaning.
2. Refer to SDS for proper personal protection requirements before using cleaning products.
3. The sanitary base toe can be slippery when wet or contaminated with foreign materials. Promptly clean-up spills and any foreign materials to maintain the flooring’s slip resistant properties.
4. Never use grit brushes, or black or brown cleaning pads.
5. Use a DoodleBug™ with a 3M™ #5100 (red) cleaning pad or a microfiber cloth.
6. To reduce dirt, debris and moisture coming into the facility, maintain walk-off mats at all exterior entry points.
7. Spots from petroleum-based products such as grease and tar must be removed with spotting agents containing solvents. Immediately rinse with water after spot removing and allow to dry.
8. Do not allow any metal furniture or trash cans to be in contact with wet sanitary or wall base.

Post-Installation Maintenance (nora[®] sanitary base only)

A general cleaning must be performed after installation. If seams are cold welded, wait a minimum of 8 hours.

The following procedures should be performed by the facility:

1. Dust mop the sanitary base to remove dirt or grit.
2. Remove any spots of foreign material using Windex[®] or Goof Off[®] solvent.
3. Damp mop the sanitary base using a diluted high pH (12-13pH) post-maintenance product cleaner/degreaser and allow the solution to dwell for a minimum 10 minutes.
4. Lightly scrub the sanitary base with a DoodleBug™ pad holder with a 3M™ #5100 (red) cleaning pad.
5. Wet vacuum the soiled solution, rinse the sanitary base with clean water and allow to dry.

Daily Maintenance

1. Remove any spots of foreign material using Windex® or Goof Off® solvent.
2. Damp mop the sanitary or wall base using a microfiber mop or cloth and a diluted daily maintenance product, and allow to dry.

Acceptable Pads

Post-installation maintenance	nora sanitary base only: DoodleBug™ red pad
Daily maintenance	n/a

Note: Never use grit brushes, or black or brown cleaning pads.