

nora systems, Inc.



Healthcare Maintenance Guide - OR

General Remarks

nora® floor coverings have a production residue. This residue shall be removed (initial maintenance) before the flooring is used, otherwise it will attract dust and dirt.

General Precautions


1. Always use "wet floor" signs and/or caution tape when performing any wet cleaning.
2. Refer to MSDS for proper personnel protection requirements before using cleaning products.
3. The floor will be slippery when wet or contaminated with foreign materials. Promptly clean-up spills and any foreign materials, to maintain the slip resistant properties of the flooring.
4. Never use grit brushes, black or brown cleaning pads.
5. Use a 3M™ #5300 cleaning pad.
6. Do not allow any metal furniture or trash cans to be in contact with the wet floor.

1

Initial Maintenance

Note: A general cleaning shall be performed a minimum of 72 hours after installation.

The following procedures shall be performed by the facility.

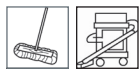

1. Dust mop or vacuum the floor to remove dirt or grit.

2. Remove any adhesive residue.



3. Wet mop the floor using a diluted initial maintenance product (maintenance product reference chart provided) and allow the solution a minimum dwell time of 10 minutes.



4. Scrub the floor thoroughly with a floor scrubber using a 3M™ #5300 cleaning pad.



5. Wet vacuum the soiled solution, rinse the floor with clean water and allow to dry.

2

Daily Maintenance Between Surgeries

Perform daily maintenance between surgeries and prior to using the OR.

1. Remove loose residue (gather all litter from the floor and deposit into waste containers).



2. Damp mop the floor with an EPA registered disinfectant cleaner and allow to dry (check with SOP).

3

End-of-Day Maintenance

The end-of-day maintenance shall be performed after the cleaning “above the floor” is completed.

1. Remove loose residue (gather all litter from the floor and deposit into waste containers).

2. Before proceeding, follow Infection Control guidelines to remove blood.



3. Wet mop the floor with a diluted periodic maintenance product, and allow the solution a minimum dwell time of 10 minutes.



4. Thoroughly scrub the floor with a floor scrubber using a 3M™ #5300 cleaning pad.



5. Wet vacuum the soiled solution, rinse the floor with clean water and allow to dry.



6. Damp mop the floor with an EPA registered disinfectant cleaner and allow to dry (check with SOP).

7. Prior to replacing the OR table, make sure the floor is thoroughly dry underneath.

Note: Clean-up procedures shall be rigidly followed to contain and confine organisms in order to prevent contamination of the entire suite. Local SOP's must be checked for specific procedures.

It is necessary to perform end-of-day maintenance, as floor disinfectants do not offer the same level of cleaning and emulsification.

nora systems, Inc.

94 Glenn Street
Lawrence, MA 01843
Toll-free: 800-332-NORA
Phone: (978) 689-0530
Fax: (978) 687-4640
E-mail: info-us@nora.com
www.nora.com/us





nora systems, Inc.

Maintenance Product Reference Chart

	Initial Maintenance	Daily Maintenance	Periodic Maintenance	Green Certified Cleaner (daily maintenance)
Diversey	Profi™ Floor Cleaner Dilution: 8 oz/gal	Alpha HP® GP Forward	Hot Spring™ Dilution: 4 oz/gal Profi™ Floor Cleaner Dilution: 4 oz/gal	G Force H ₂ O
3M™	26H	8H 3H	26H	#3 #8
Ecolab®	Citrusolv™ Dilution: 8 oz/gal	Bright Neutral Bright Speed	Citrusolv™ Dilution: 4 oz/gal	Quik Fill 310
Betco	Citrus Chisel Dilution: 8 oz/gal Green Earth® Natural Degreaser Dilution: 8 oz/gal	Ph7 Peroxide	Citrus Chisel Dilution: 4 oz/gal Green Earth® Natural Degreaser Dilution: 4 oz/gal	Green Earth® Peroxide Cleaner
Spartan®	Green Solutions® Industrial Cleaner Dilution: 8 oz/gal Tribase Dilution: 8 oz/gal	Pathmaker Clean by Peroxy	Green Solutions® Industrial Cleaner Dilution: 4 oz/gal Tribase Dilution: 4 oz/gal	Green Solutions® Industrial Cleaner all purpose cleaner Clean by Peroxy
Buckeye	RAM™ Dilution: 8 oz/gal	Buckeye Blue	RAM™ Dilution: 4 oz/gal	True7

Note: For any other maintenance products, please contact the nora Technical Department prior to use.
For products without dilution rates listed, follow the manufacturer's instructions.

nora systems, Inc.

94 Glenn Street
Lawrence, MA 01843
Toll free: 800-332-NORA
Phone: (978) 689-0530
Fax: (978) 975-0110
E-mail: info-us@nora.com
www.nora.com/us



All About Flooring. **All About You.**